

## *Nagant Revolver*

### *Disassembly / Cylinder replacement Instructions*

---

There are no tools or "tricks" required to do this. It is actually much easier than the directions seem. This entire procedure can be done in just a few moments.

Twist rod under barrel, and pull towards the muzzle until it stops. The rod will not come all of the way out of the firearm. (Figure 1)



*Figure 1*

---

Rotate the metal piece in front of the cylinder until the bushing is cleared, and the index marks the line up. (Figure 2)



*Figure 2*

---

Remove the bushing. (Figure 3)



Figure 3

---

Lower the loading gate and roll out the cylinder. (Figure 4)



Figure 4

---

Please note that there is a spring loaded bushing in the cylinder itself. Simply depress this bushing slightly while twisting and it will pop up when the index marks line up. (Figure 5)



Figure 5

---

Remove the busing and spring. (Figure 6)



Figure 6

---

*Note: All of the parts you removed (2 bushings and 1 spring) are required to install the .32ACP cylinder!*

*To install the new cylinder, just reverse the procedure.*

*If you are not sure about anything, please have your firearm checked by a qualified gunsmith before firing.*

---

[Return to Main Menu](#)

Century Int'l Arms (C) 1998 - 1-800-527-1252

07/01/09

