

UPDATED 10/19/2018

SUPPORT@CENTURYARMS.COM



AK47 SERVICE RECOMMENDATIONS

FOR ALL AK47 STYLE RIFLES

YOUR AK47 STYLE RIFLE IS DESIGNED TO PROVIDE YEARS OF RELIABLE SERVICE AND TO BEST ACHIEVE THIS, WE RECOMMEND YOU FOLLOW THESE SERVICE INTERVAL RECOMMENDATIONS.

FIELD STRIPPING See Owner's Manual. Follow all precautions and ensure firearm is unloaded.

CLEANING THE RIFLE See Owner's Manual.

Once the rifle has been cleaned and lightly oiled, inspect all parts for damage or excessive wear. Should any parts show signs of cracking or chipping, they should be replaced. These parts include:

- Extractor
- Bolt
- Bolt Carrier
- Hammer
- Trigger
- Sear
- Recoil Spring Assembly
- Safety
- Dust Cover

To ensure your AK47 Style Rifle does not experience stoppages in the field, we recommend the following service intervals:

Replace Extractor Spring

3,000 / 6,000 / 9,000 / 12,000 / 15,000

Or every 3,000 rounds fired

Replace Recoil Spring

3,000 / 6,000 / 9,000 / 12,000 / 15,000

Or every 3,000 rounds fired

Replace Hammer Spring

6,000 / 12,000 / 18,000

Or every 6,000 rounds fired

Replace Sear Spring

6,000 / 12,000 / 18,000

Or every 6,000 rounds fired

Remove Carbon Residue From Gas Port

6,000 / 12,000 / 18,000

Or every 6,000 rounds fired

Replace Magazine Catch Spring

12,000 / 24,000

Or every 12,000 rounds fired